

Quality speaks
louder
than words



Century™ – 660 TC

 **SENNHEISER**
The Pursuit of Perfect Sound



reddot design award
winner 2013



SC 660 TC

Sennheiser SC 660 TC is a premium double-sided wired headset specially designed for professionals in enterprises and offices with special hearing needs. The headset works with all standard telecoil-equipped hearing aids and brings all the benefits such as improved communication, superb sound and productivity to the users.

Sound leadership

With Sennheiser Voice Clarity and ultra noise-cancelling microphone, SC 660 TC optimizes speech intelligibility in noisy office environments giving hearing aid users crisp and clear phone conversations without background noise.

Quality design

With a focus on quality materials and durability, SC 660 TC is built to last. Stainless steel and brushed aluminum parts with a unibody headband construction create an iconic, high-end design that enhances strength and robustness.

User focus

SC 660 TC is equipped with a hearing aid-compatible telecoil in each speaker of the headset. The telecoils transmit a

magnetic field that will be picked up by the hearing aid device.

Sound enhancement features make conversations crystal clear, and leatherette ear pads ensure powerful sound and wearing comfort. A metal reinforced headband maintains a perfect fit and is numbered for easy accurate adjustment. Sennheiser ActiveGard® technology protects users against acoustic injury caused by sudden sound burst on the line.

Features and Benefits:

- Designed for headset users with special hearing needs
- Compatible with all standard hearing aids (T-mode or MT-mode)
- Equipped with hearing aid-compatible telecoil transmitters
- Sennheiser Voice Clarity – wideband sound for a natural listening experience
- Ultra noise-cancelling microphone for perfect speech transmission
- High-quality neodymium speaker for outstanding audio quality
- Sennheiser ActiveGard® technology protects users from acoustic injury caused by sudden sound burst on the line


- Stainless steel hinge on speaker joint for maximum strength
- Brushed aluminum parts for strong and lightweight design
- Unibody headband construction for maximum strength at stress points
- Vectran™* reinforced cable for extreme durability
- Easy Disconnect – disconnect the headset from the bottom cable on the ED plug for user flexibility
- Large leatherette ear pads for exceptional wearing comfort and powerful sound
- Bendable boom arm – for optimal microphone position
- Extension headband with number indication for accurate adjustment
- 90 degree turnable speaker-housing for space saving storage and transport
- Protective carry pouch – for easy storage
- 3 years international warranty

*Vectran™ is a registered trademark of Kuraray Co., Ltd., Japan.

Product Information

Product name	SC 660 TC
Art. No.	507099
EAN No.	40 44155 21456 7
UPC No.	6 15104 28066 3
Product description	Double-sided CC&O HS, ED for use with hearing aids
Microphone	
Microphone	Ultra noise-cancelling
Frequency response - communication/telecommunication	150 – 6,800 Hz (Wideband)
Speaker	
Speaker type	Neodymium Magnet Speaker
Impedance	~200 ohm
Frequency response	50 – 18,000 Hz
Sound pressure	Max. 103 dB limited by ActiveGard®
General Data	
Wearing style	Headband, double-sided
Cable length	1000 mm / 39.37 in
Connector	Easy Disconnect
Color	Black with silver
Headset weight	113 g / 3.99 oz
Packaging	
Included in the pack	Headset, quick guide, safety guide, leatherette ear pads, nylon carry pouch and cable clip mounted on headset
Package dimensions	201 x 153 x 60 mm / 7.01 x 6.02 x 2.36 in
Package weight	253 g / 8.92 oz
Units in distributor master carton	20 pcs
Master carton weight	6.29 kg / 13.87 lbs
Master carton dimensions	615 x 415 x 185 mm / 24.21 x 16.34 x 7.28 in
Unit pack/end user	1pc

Product description	Product name	Can be used for following products	Art. No.	EAN No.	UPC No.
Leatherette ear pad SC 600 L, 2 pcs	HZP 34	SC 630, SC 660, SC 632, SC 662, SC 630 USB CTRL, SC 660 USB CTRL, SC 630 USB ML, SC 660 USB ML, SC 660 TC	504560	40 44155 08351 4	6 15104 23716 2
Leatherette ear pad SC 600 L, 26 pcs, bulk	HZP 36	SC 630, SC 660, SC 632, SC 662, SC 630 USB CTRL, SC 660 USB CTRL, SC 630 USB ML, SC 660 USB ML, SC 660 TC	504562	40 44155 08353 8	6 15104 23723 0
Name plate set CC&O for cable	Name plate CC&O	SC 630, SC 660, SC 632, SC 662, SC 630 USB CTRL, SC 660 USB CTRL, SC 630 USB ML, SC 660 USB ML, SC 660 TC	504545	40 44155 08336 1	6 15104 23682 0
Black ear pad holder ring, size L, SC 600, 10 pcs	Ear pad holder L, SC 600	SC 630, SC 660, SC 632, SC 662, SC 630 USB CTRL, SC 660 USB CTRL, SC 630 USB ML, SC 660 USB ML, SC 660 TC	504592	40 44155 08884 7	6 15104 24846 5
Speaker protection cover SC 600, 10 pcs	Speaker cover, SC 600	SC 630, SC 660, SC 632, SC 662, SC 630 USB CTRL, SC 660 USB CTRL, SC 630 USB ML, SC 660 USB ML, SC 660 TC	504595	40 44155 08887 8	6 15104 24849 6
Fixation kit for call control unit SC 600, 1 pc	Fixation kit 01, SC 600	SC 630 USB CTRL, SC 660 USB CTRL, SC 630 USB ML, SC 660 USB ML, SC 660 TC	504594	40 44155 08886 1	6 15104 24848 9
Side support, SC 600, 1 pc.	TPSC 01, SC 600	SC 630, SC 632, SC 630 USB CTRL, SC 630 USB ML, SC 660 TC	504597	40 44155 08889 2	6 15104 24851 9
Leatherette ear pad SC 600, size M, 2 pcs	HZP 35	SC 630, SC 660, SC 632, SC 662, SC 630 USB CTRL, SC 660 USB CTRL, SC 630 USB ML, SC 660 USB ML, SC 660 TC	504561	40 44155 08352 1	6 15104 23721 6
Leatherette ear pad SC 600, size M, 26 pcs, bulk	HZP 37	SC 630, SC 660, SC 632, SC 662, SC 630 USB CTRL, SC 660 USB CTRL, SC 630 USB ML, SC 660 USB ML, SC 660 TC	504563	40 44155 08354 5	6 15104 23727 8
Black ear pad holder ring, size M, SC 600, 10 pcs	Ear pad holder M, SC 600	SC 630, SC 660, SC 632, SC 662, SC 630 USB CTRL, SC 660 USB CTRL, SC 630 USB ML, SC 660 USB ML, SC 660 TC	504593	40 44155 08885 4	6 15104 24847 2
CB 01	Nylon carry pouch	SC 630, SC 660, SC 632, SC 662, SC 630 USB CTRL, SC 660 USB CTRL, SC 630 USB ML, SC 660 USB ML, SC 660 TC	92818	40 12418 92818 6	6 15104 92818 3
Carry case 02	Carry case 02	SC 6xx- and MB series	506059	40 44155 09069 7	6 15104 25144 1

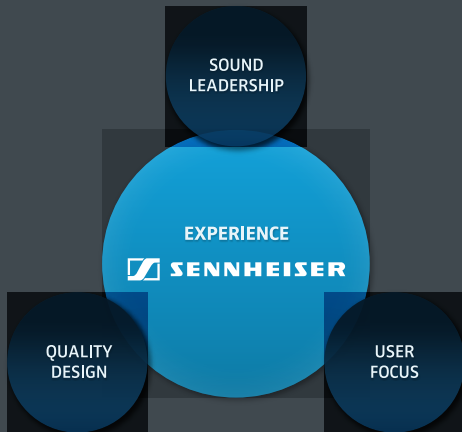

Experience Sennheiser

Perfection is always relative: Users have different expectations from their headsets and speakerphones depending on their needs. For professional users, that need is to communicate as effectively as possible.

With Sennheiser's range of headsets and speakerphones, the combination of Sennheiser sound leadership, quality design and build – and a focus on real life usability – give the best performance possible in offices, contact centers and Unified Communications environments.

Please visit us at: www.sennheiser.com/cco



Sennheiser is one of the world's leading manufacturers of headphones, microphones, wireless transmission systems and high-quality headsets and speakerphones for both business and entertainment.

Drawing on the electro acoustics expertise of Sennheiser and the leading hearing healthcare specialist William Demant, Sennheiser Communications' wireless and wired headsets for contact centers, offices and Unified Communications professionals are the result of Sennheiser's and William Demant's joint leadership in sound quality, design, wearing comfort and hearing protection.

Sennheiser Communications A/S

Industriparken 27 · DK-2750 Ballerup · Denmark